

NVR Quick Guide

Welcome

Thank you for choosing our product. This guide contains useful information about using the device. Please read through this guide before you start.

Notice

- All operations should comply with your local electrical safety codes.
- We (including our dealers) shall not be held responsible for any damage or loss caused by improper handling during the installation or use of the device.
- The illustrations in this guide are for reference only and may be different from the actual device. This guide is subject to change without notice.

Packing List

Please check the items in your package carefully. Contact your dealer if you find anything missing or damaged.

- Power adapter
- Hard disk data cable
- Hard disk power cable
- Mouse
- Screws
- User document
- Power cable (for some models only)

Installation

This NVR series has only one hard disk. Please follow the steps to install the disk. A screwdriver is needed. The following figures are only for illustration purpose.

1. Loosen the screws on the bottom cover.



2. Fix the four screws on the disk without fully tightening them.



3. Align holes on the disk with holes on the bottom cover.



4. Secure the disk to the bottom cover using four screws.



5. Connect the data and power cables.



6. Place the cover in position and then fix the four screws.




LEDs

LED	Indication
	Steady: The device is operating properly. Blinks: The device is starting up.
	Steady: The device is connected to a network.
	Steady: The device is connected to the cloud server.
	Steady: No disk is installed, or the installed disk is faulty. Blinks: The disk is reading or writing data.

Interfaces

The interfaces may vary depending on your device model.

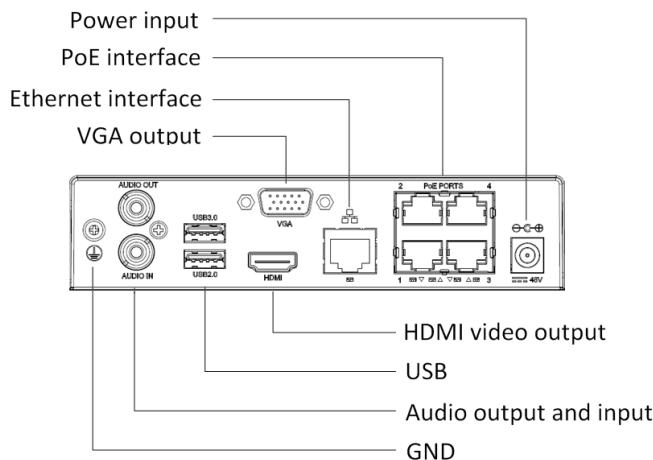


Local Login

After the device starts up, use the default username (**admin**) and password (**123456**) to log in for the first time.

CAUTION!

The default password is intended only for your first login. To ensure account security, please change the password immediately when you are logged in. A strong password containing at least eight characters is recommended.

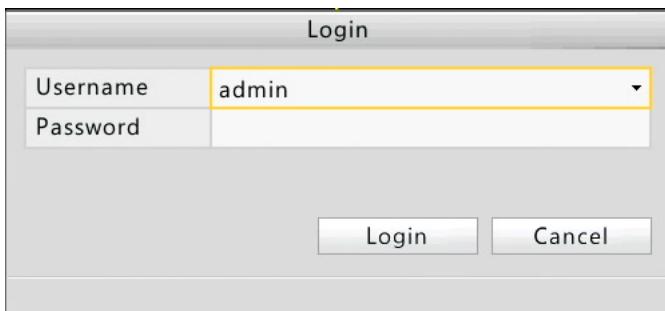

Login from the Web

Open a Web browser and enter the IP address of your device in the address bar. Follow prompts to install the plug-in. After the installation is completed, reopen the Web browser and log in.

The default IP address of your device is **192.168.0.30**. The default username for your device is **admin** and password is **123456**.

